

CHANGING THE HEAT PLATES

BOTTOM PLATE

TO REMOVE EXISTING BOTTOM PLATE

Swing head of machine to the side to give clear working access to the bottom plate. Rotate the bottom plate anti-clockwise. This in effect simply unscrews it and after several turns can be lifted away.

TO INSTALL REPLACEMENT PLATE

Insert post of bottom platen into the receptacle on the machine base. Rotate bottom platen clockwise until the required pressure is achieved between the plates.

TOP PLATE

The top plate can only be changed by returning the 3030 machine to J&A (International) Ltd.